

Mini Portable TV

Instruction Manual

Main functions

- * High Clarity TFT display screen.
- * Support music formats of MP3、WMA、WAV、FLAC、APE.
- * Support video formats of RMVB、MPEG-4(FLV、AVI).
- * Support digital television.
- * Support FM radio.
- * Support photo formats of JPEG, BMP, GIF.
- * Support to read electric doc.
- * Support other functions such as StopWatch & Calender .
- * A inner microphone, longer sound recording time.
- * Energy-saving set up, free to adjust brightness, automatic shut off.
- * Support games functions.
- * Multi music efficiency, optional at circulation function.
- * Support Multi languages.
- * USB2.0 high express transmission.
- * Support upgrade.

1、Television

Choose "**DVB-T**" (ISDB-T / CMMB / ATSC) in main menu and enter by shortly pressing "**M**".

● Press "**M**" key to enter "**Television Set**", 7 options: Video Broadcast, Audio Broadcast/Others, Program Information, Auto Scan or Manual Scan, Area Setting and Timezone Diversity Setting. In the 7 options, press

“backward/ forward” to choose one option, then shortly press “M” key to enter .

(1) **Area setting (first step)**

Options: Europe, Australia, Korea, Taiwan, France for optional.

(2) **Channel search**

Automatically search channels or Manual search channels.

(3) **Video Broadcast**

After searching , press “↩” will return to main interface ,choose “Video Broadcast” and shortly press “M” key to enter ,then fast to press “backward/ forward” key to choose television channels.

- Fast to press “VOL+/VOL-” key to increase sound volume up or down.

2、 Play music



Choose “play music”, and shortly press “M” key to enter “play music”.

- Press “backward/ forward ” to choose the former song or the later one. Then shortly press “M” shortly to enter music play .
- In song playing, press “M” to enter the playing list of audio frequency files. Press “backward/ forward” to choose file and confirm it by pressing “M”, pressing “↩” will return to main interface that will not interrupt music playing.
- Press “PLAY” key to pause.

Functions instruction:

A、 Adjust sound volume

Fast press “VOL+/VOL-”key to adjust sound volume.

B、 Play list

Press “M” key to enter the playing list of audio frequency files.

C、 Set music specialize mode

Press “↩” key to retreat to main interface, press “backward/ forward” to choose EQ set, you can choose normal (NOR) /3D/ (ROCK) / (POP) / (CLASS) / (BASS) / (JAZZ) / (USER optional) 8 kinds of music specialize mode. Experience different music specialized by hitting “M” key to choose different modes.

D、 Song words display

When songs playing , shortly press "M" to show a list , then press "**backward/ forward**" to choose "Lyric", the song words will be synchronous with song.

3、 Play Video

- Shortly press "**backward/ forward**" to choose video file.
- Choose a video file and fast press "M" key to enter and play.
- It will return to video file list by pressing "M" on the time of playing, press "↩" to return to main interface of video play.
- Shortly press " M " key to pause/continue to play.

Functions instruction:

A、 Fast forward/Fast backward

Long press "backward / forward" key in video playing interface to fast backward or fast forward.

B、 Play list

Press "M" key to enter playing list of video files, press "backward / forward" key to choose video files, shortly press "PLAY" key to delete file and press "↩" to return to video playing.

C、 Adjust sound volume

Press "**VOL+/VOL-**"key to adjust sound volume(up/down), long press "**VOL+/VOL-**"key to continuously increase/ decrease volume.

4、 Photo view

Choose "**Photo view**" in main menu, shortly press "M" to enter "**Photo view**".

- Press "**backward/forward**" to choose the former image /the next one.
- In photo resource administrator, press "**backward/forward**" to choose photo files.
- After choosing file, press "M" key to view the chosen images by full-screen way. Press "PLAY" key to start/shut automatic photo-view.
- When displaying photo, Press "M" to return to last grade photo resource administrator. Press "PLAY" to delete file.
- Press "↩" key to return to main interface "photo view".

5、 E-book

Choose "**read Electric book**" in main menu, shortly press "M" to enter "**Electric book**". At this time, you first get into file list of **Electric book reading**.

- In the list of electric book files, press "backward / forward" key to choose file.
- After choose one file, press "M" key to enter the reading interface of electric book.
- Press "M" key to return to the list of electric book files, press "PLAY" key to delete file.
- Press "↩" key to return to main interface.

Function instruction:

- A. After choosing the file, Press "M" key to enter the reading interface of electric book.
- B. Press "backward/forward" to read by turning the whole page. Press "VOL+/VOL-" to turn from front to back.
- C. Press "M" key to pick up bookmark list, then press "backward/forward" key to choose bookmark and press "M" to confirm save/pick out bookmark. Press "VOL+" key to quit out bookmark list.
- D. Press "PLAY" key to automatic/pause file reading.

Note:

On reading, you can estimate the surplus contents per progress bar at the right side. Bookmark is only for currently reading file, if read additional file, please reset bookmark.

6、Other Function

Choose "Other Function" in main menu, shortly press "M" to enter .
2 optional : StopWatch and Calender .

7、FM Radio

Choose "Radio" in main menu, shortly press "M" key to enter radio. Then press "backward/ forward" to set.

- A. **Search by hand:** Press "M" to choose preset, shortly press "M" to enter preset. It is to display those saved radio stations.
- B. **Auto search:** Shortly press "M" to automatically adjust channel.
- C. **Present mode:** Press "M" to return radio mode.
- D. **Save channel:** Shortly press "backward/forward" to choose save, shortly press "M" to save, It is to save radio stations.
- E. **Delete channel:** Shortly press "backward/forward" to choose delete, shortly press "M" to delete the saved radio stations.
- F. **Stereo switch :** On Or Off for optional.
- G. **Receive area :** China , Japan , USA , Europe , Campus Radio , Taiwan for optional .
- H. **FM record :** Press "M" to start recording .

8、Sound recording

Choose "Record" in main menu, press "M" key to enter interface of "Sound recording".

Operation methods:

- A. Press "M" to start recording or pause recording .
- B. Press "↩" key to save recorded files or retreat from recording.


Play recorded sound:

- (1)、Back to main menu " music" , enter "Record" to playing recording files.

- (2)、 Press “**M**” to enter resource administrator, Press “**backward/forward**” to choose sound recording files, then press “**M**” to play.
- (3)、 Press “**VOL+/VOL-**” key to adjust sound volume.

9、 Explorer :

Press “**M**” to enter this option, all stored files are list in it .

- Press “**backward/forward**” to choose any files , press “**M**” key to enter relative playing interface, if the file is not recognized, the key will not respond.
- Press “” key to return main interface.
2Delete files.
When to delete files, long press “**M**” key on chosen file, jump out dialogue frame of deleting, you can press “**VOL+/VOL-**”key to “confirm” or “cancel”, shortly press “**M**” key to do delete.


10、 Setting

Choose “Setting” option in main menu, press “**M**” key to enter “setting” items. Press “**backward/forward**” to choose one or press “**M**” key to enter it.

A、 Display setting

4options: Light time, Brightness, Light Mode, Displaying status. Press “**backward/forward**” key to choose options, press “**M**” key to enter the second grade menu. In the 4 options, press

“**backward/forward**” key to choose one and then press “**M**” key to quit and save setting.

- ① Light time
Options: 5sec, 10 sec, 15 sec, 20 sec, 30 sec, Always on for optional.
 - ② Brightness
Options: one, two, three, four, five . one is the darkest while five says the brightest.
 - ③ Light mode
Options: All dark or Penumbra.
 - ④ Displaying status
Hide or Display
- B、 System setting
System Restorable
- C、 Desk Top
From desk1 to desk8 for optional.
- D、 Time setting
Press “**M**” key to enter “Time and Date” setting.
- E、 Language setting
Options : Chinese , English and other multi languages.
- F、 System Information
Options: storage capacity, the left capacity, system software series, these information is only to read, press “” key to quit.
- G、 AutoShut time.

In this menu, press "**backward/forward**" to choose relative option and press "MENU" key to confirm quitting out and save setting.

Options: 3min, 5min, 10min, 15 min, 20 min and no automatic shutdown

11、 Trouble shooting

(1). Play can't start up

- Check if there is power in battery or not.
- Check again after pressing reset key.
- Check again after connecting a mains adaptor.
- Charge the battery, if still fail in starting up, please contact our after service department.

(2). No sound from earphone.

- Check if the sound volume is set to 0.
- Check the connection of earphone.

(3). Fail to work when press key.

- Please check if electric lock is in locking situation, if yes, you can press "hold" key for a long time and then open electric lock to try again.

(4). Heavy noise

- Ensure a clean earphone plug as dirty will cause noise.

·Check if the music has been broken? You can try to play other music for confirmation. The broken file is possible to cause heavy noise or sound jump.

(5). Error display in screen

- Please check if you have set correct language? You can do it by entering from <set> to <system set>, and then to <language set>.

(6). Fail in download files

- Confirm computer is rightly connected to player.
- check room of storage is full or not? ·Check USB cable is right or broken?

12、 Technical specification

Display screen	3.5"/4.3" TFT	
Digital TV single	DVB-T (ISDB-T / CMMB / ATSC)	
Mains	Li battery	
Sound recording	Sample rate	8KHz/16KHz
	Recording format	WAV(32Kbps/64Kbps)
Music format	MP1、 MP2、 MP3、 WMA、 WAV、 APE、 FLAC 、 OGG etc.	
Video format	AVI/RMVB/MPEG/ASF etc.	
Work temperature range	-5 to 40 °C	
Language choice	Chinese, English , Deutsch , Italian , Portugues and France etc .	
Operating system supported	Windows98 / SE / ME / 2000 / XP / Vista	